

ThinkPad E14 Gen 6 / ThinkPad E16 Gen 2



Get started



Overview



Overview

ThinkPad E16 Gen 2





Press to log in to the computer*

Φ

Navigate as a traditional mouse

Overview



Read the statement on USB transfer rate in the User Guide. To access the User Guide, refer to methods mentioned on the back cover.

Lenovo Vantage*

Access Lenovo Vantage to adjust device settings, check for system updates, and have your device warranty status.



[English]

Specific absorption rate (SAR)

YOUR DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES.

Refer to the following for 10g SAR limit and maximum reported SAR values: 10g SAR limit: 2 W/kg (body-worn SAR); 4 W/kg (limb SAR)

Maximum SAR with 0 mm separation distance:

Product name	Body-worn SAR value	Limb SAR value
ThinkPad E14 Gen 6	0.308 W/kg	0.308 W/kg
ThinkPad E16 Gen 2	0.441 W/kg	0.441 W/kg

For more information about SAR, refer to the Safety and Warranty Guide that came with your device.

European Union (EU) / United Kingdom (UK) — radio frequency and power

This radio equipment operates with the following frequency bands and maximum radiofrequency power:

Technology	Frequency [MHz]	Maximum transmit power
WLAN 802.11b/g/n/ax Bluetooth BR/EDR/LE	2400 - 2483.5	< 20 dBm
WLAN 802.11a/n/ac/ax	5150 - 5350; 5470 - 5725	< 23 dBm
WLAN 802.11a/n/ac/ax	5725 - 5875	< 13.98 dBm
WLAN 802.11ax	5945 - 6425	< 23 dBm

Note: Not all wireless bands may be enabled depending on your product configuration. Usage of this device is limited to indoor locations in the bands 5150 - 5350 MHz and 5945 - 6425 MHz. Access User Guide



