Package contents

# Orbi Pro WiFi 6 AX5400

Quick Start





Orbi Pro WiFi 6 AX5400 Router (Model SXR50)

**NOTE:** Both devices are included in the SXK50 or can be purchased separately.

Orbi Pro WiFi 6 AX5400 Satellite

(Model SXS50)

Power adapter (varies by region)



Ethernet cable (not included with the SXS50)





201-28681-02

Hardware overview

### Orbi Pro WiFi 6 AX5400 Router



Bar LED
Sync button (also used for WPS connection)
1G LAN Ethernet ports 1-3.
1G WAN Ethernet port (yellow). Use the WAN port for your Internet connection.
Power LED
Reset button
DC power connector

Orbi Pro WiFi 6 AX5400 Satellite

1



### Router setup

- 1. Connect the yellow WAN port on the Orbi Pro WiFi 6 AX5400 Router with an Ethernet cable to a modem or gateway.
- 2. Connect the router to power.



### Step 1: Connect the Orbi Pro WiFi 6 AX5400 Router

The Orbi Pro WiFi 6 AX5400 Router (model SXR50) can be used alone, or supports up to six Orbi Pro WiFi 6 AX5400 Satellites (model SXS50).

The back of the router has one yellow WAN port and three LAN ports. The label on the router displays model SXR50, and the preset WiFi network name (SSID) and password.

- 1. To set up a WiFi network with Internet, the router must connect to a modem or a gateway that provides Internet.
- If you use a modem, unplug the modem, remove and then reinsert the backup battery if it uses one, and plug the modem back in
- If you use a gateway, we recommend that you turn off your gateway's WiFi.
- 2. Use an Ethernet cable to connect your modem or gateway to the yellow WAN port on the back of your router.
- 3. Connect the router to a power source.

The Power LED on the back of the router lights green.

When the bar LED on the front of the router lights solid white, the router's preset WiFi network is ready for setup.

The router's bar LED turns off after about three minutes.

### Step 2: Connect an Orbi Pro WiFi 6 AX5400 Satellite from a kit (optional)

If you purchased an Orbi Pro WiFi 6 AX5400 Router with a satellite as a kit, the Orbi Pro WiFi 6 AX5400 Satellite (model SXS50) is already paired with the router. If you purchased an SXS50 satellite separately, see <u>Step 4. Sync an add-on</u> satellite to the router (optional).

- 1. Place the satellite approximately 10 ft. away from the router, facing the router, with a direct line of sight.
- 2. Connect the satellite to a power source.

The Power LED on the back of the satellite lights green.

The Bar LED on the front of the satellite pulses white while booting up

3. Wait for the satellite to connect to the router.

This process might take between two and five minutes

When the bar LED on the satellite lights blue, the connection between the router and satellite is good. If the bar LED lights amber or magenta, see Orbi Pro WiFi 6 AX5400 Satellite bar LED sync information.

# Step 3: Set up the WiFi network's Internet connection

- 1. Connect your WiFi-enabled computer or mobile device to the router using a WiFi or Ethernet connection:
- WiFi: Use the preset WiFi network name (SSID) and password on the router label to connect to the Orbi WiFi network.
- **Ethernet**: Use an Ethernet cable to connect your computer to the router.



- 2. Launch a web browser and type **orbilogin.com** in the address field.
- **NOTE:** Your browser might display a security warning because of the self-signed certificate on the device, which is expected behavior. You can proceed or add as a survey in the self-signed certificate on the device. information, see https://kb.netgear.com/000062980.

The interactive Internet setup process starts. This process can take several minutes to complete.

When you complete the process, your settings are applied, and the devices restart.

The router's bar LED turns off when the setup completes. You can unplug and move the satellite to the desired location. For more information, see Step 5. Place the satellite at the desired location (optional).

# Step 4. Sync an add-on satellite to the router (optional)

If you want to extend your WiFi coverage, you can purchase an Orbi Pro WiFi 6 AX5400 satellite (model SXS50) separately.

#### To sync an add-on SXS50 satellite:

- 1. Place the satellite approximately 10 ft. away from the router, facing the router, with a direct line of sight.
- 2. Connect the satellite to a power source.

The power LED on the back of the satellite lights green.

After approximately two minutes, the satellite bar LED on the front of the satellite lights solid white.

3. Press the **Sync** button on the back of the satellite, and within two minutes, press the **Sync** button on the back of the router.

The satellite bar LED pulses white.

4. Wait for the satellite to connect to the router.

This process might take between 6 and 12 minutes.

When the bar LED on the satellite lights blue, the connection between the router and satellite is good. If the bar LED lights amber or magenta, see Orbi Pro WiFi 6 AX5400 Satellite bar LED sync information.

# Step 5. Place the satellite at the desired location (optional)

Place the Orbi Pro WiFi 6 AX5400 Satellite (model SXS50) at the location where you want WiFi coverage. The satellite must be within range of the SXR router or another SXS50 satellite that is connected to the router. The router supports a maximum of six satellites

For information on optimal placement in home offices see <u>https://kb.netgear.com/31029</u>, or for business and commercial installations see https://kb.netgear.com/000045858/.

#### To place your SXS50 satellite:

- 1. Place the satellite in the desired location
- 2. Connect the satellite to a power source, and confirm that the bar LED lights blue.

If the satellite bar LED lights amber, indicating that the connection is fair but not good, consider moving the satellite closer to the router.

3. If adding more than one satellite, repeat steps 1 and 2 of this procedure.

# Orbi Pro WiFi 6 AX5400 Satellite bar LED sync information

When the SXS50 satellite tries to sync with the router, the bar LED lights one of the following colors for several minutes, and then turns off:

Blue

The connection between the router and satellite is good.

#### Amber

The connection between the router and satellite is fair. Consider moving the satellite closer to the router.

Magenta

The satellite was unable to connect to the router. Move the satellite closer to the router.

### Troubleshooting

If the bar LED lights magenta and does not light white within a couple of minutes, resync the router and satellite. First, press the **Sync** button on the back of the router, and within two minutes, press the **Sync** button on the back of the satellite. The satellite's bar LED lights white, then lights blue to indicate a good connection, and then turns off.

### Manage and monitor your Orbi Pro WiFi 6 AX5400 network

To enable other Orbi Pro features, and manage and monitor your Orbi Pro WiFi 6 AX5400 network and devices, you can log back in to the router web interface using the unique password that you specified during setup. Or, if you want remote management and advanced services, you can use the NETGEAR Insight Cloud portal and Insight app.

### Router web interface

For more information about configuring your device through the router web interface, see the Orbi Pro WiFi 6 AX5400 user manual, which you can download by visiting netgear.com/support/download.

### NETGEAR Insight

You can manage the Orbi Pro remotely using the NETGEAR Insight Cloud portal or Insight app.

Insight remote management offers additional features and add-on services that are not available when you use the router web interface. Your new Insight-manageable device comes with Insight included.

For more information, visit www.netgear.com/insight/subscription.aspx.

For information about setting up your Orbi Pro WiFi 6 network with Insight, see <u>https://kb.netgear.com/000062268</u>.

### Support and Community

Visit netgear.com/support to get your questions answered and access the latest downloads.

You can also check out our NETGEAR Community for helpful advice at community.netgear.com.

## Regulatory and Legal

Si ce produit est vendu au Canada, vous pouvez accéder à ce document en français canadien à https://www.netgear.com/support/download/

(If this product is sold in Canada, you can access this document in Canadian French at https://www.netgear.com/support/download/.)

For regulatory compliance information including the EU Declaration of Conformity, visit https://www.netgear.com/about/regulatory/.

See the regulatory compliance document before connecting the power supply.

For NETGEAR's Privacy Policy, visit <u>https://www.netgear.com/about/privacy-policy</u>.

By using this device, you are agreeing to NETGEAR's Terms and Conditions at https://www.netgear.com/about/terms-and-conditions. If you do not agree, return the device to your place of purchase within your return period.

Do not use this device outdoors

Applicable to 6 GHz devices only: Only use the device indoors. The operation of 6 GHz devices is prohibited on oil platforms, cars, trains, boats, and aircraft, except that operation of this device is permitted in large aircraft while flying above 10,000 feet. Operation of transmitters in the 5.925-7.125 GHz band is prohibited for control of or communications with unmanned aircraft systems.

NETGEAR, Inc. 350 East Plumeria Drive San Jose, CA 95134, USA

November 2021

IETGEAR INTERNATIONAL LTD Floor 1. Building 3 University Technology Centre Curraheen Road, Cork, T12EF21, Ireland

© NETGEAR. Inc., NETGEAR and the NETGEAR Logo are trademarks of NETGEAR. Inc. Any non-NETGEAR trademarks are used for reference purposes only.