Easy Setup Guide Specification					담 당	관 리 자		
1. Model Description					MK PARK 12.06.15	H.J LEE 12.06.15	JO KIM 12.06.15	
мое	DEL 47WV30E	IS/47WV30BR/ 8S/47WV30- 7WV30-BAAL	BRAND	LG	Part No.	MFL67559901 (1207-REV01)		
SUF	FIX World \	World Wide Product Name Signage		Signage		(1201 112001)		
2.	Printing \$	Specificatio	on					
1. Trim Size (Format) : 172 mm x 243 mm 2. Printing Colors Cover : 1 COLOR (BLACK) Inside : 1 COLOR (BLACK) 3. Stock (Paper) Cover : Coated paper, Snow White 150 g/㎡ Inside : Uncoated paper, 백상지 60 g/㎡ 4. Printing Method : Off-set 5. Bindery : Perfect bind 6. Language : English/Czech/Spanish/French/German/Greek/Italian/Polish/Slovak/Portuguese (10) 7. Number of pages : 280 pages								
N O T E S	 Standard level, Details should be followed Eco-SCM management standard[LG(56)-A-2524]. Especially, Part should be followed and controlled the following specification. (1) Eco-hazardous substances test report should be submitted when Part certification test and First Mass Production. 							
3.	3. Special Instructions							
(1) Origin Notification * LGEIN : Printed in Indonesia * LGEWA : Printed in U.K * LGEMA : Printed in Poland * LGESP : Printed in Brazil * LGEMX : Printed in Mexico * LGEND : Printed in China * LGEIL : Printed in India								
4.	4. Changes							
8								
7								
6								
5								
4								
$\sqrt{3}$								
2								
$\underline{1}$	Jul./03/12	MK.Park	EKMC700023	Modify the Polish lang	iguage.			
REV. NO.	MM/DD/YY	SIGNATURE	CHANGE NO.	CHANG	GE CONTENTS			

Pagination sheet

Total pages : 280 pages

:	Front cover					
English		2	3	 	 27	0 <u>ia</u>
ČESKY		2	3	 	 27	@ L <u>a</u>
ESPAÑOL	The first state of the first sta	2	3	 	 27	0 <u>14</u>
FRANÇAIS		2	3	 	 27	ψ <u>ια_</u>
DEUTSCH		2	3	 	 27	@10_
ΕΛΛΗΝΙΚΑ		2	3	 	 27	¢. <u>0</u>
ITALIANO		2	3	 	 27	@1 <u>6</u> .
POLSKI		2	3	 	 27	@ <u>16</u>
SLOVENČINA		2	3	 	 27	@ <u>16</u>
PORTUGUÊS		2	3	 	 27	φu

Back cover



Easy Setup Guide MONITOR SIGNAGE

Please read this manual carefully before operating your set and retain it for future reference.

MONITOR SIGNAGE MODELS 47WV30MS 47WV30BR 47WV30BS 47WV30-BAAM 47WV30-BAAL

P/NO : MFL67559901(1207-REV01) Printed in Korea

www.lg.com

PRECAUTION



Adhere to the warning signs printed on the Box.

Precaution in movement



Do not Clamp.



Do not drop from clamping.



2 Persons needed for transport



Load with care.

Don't tumble the Set box sideward down.



Don't lie on or lean on the Set box.





Do not drop from stacking.

4 Persons needed for transport

Do not transport horizontally.

Precaution in Handling

Move the Set as a team of 2 persons. When you move the bare Set, please use one hand on grabbing the handle and the other support under the Set.







Causes & Phenomena of the Line Defect



The line defect would occur on your Set if you strike on the edge of the Set.

LOG (LINE ON GLASS) DEFECT



Shock on Module Left/Top Corner \rightarrow Left/Top LOG Crack \rightarrow Horizontal Line Defect

LOG (LINE ON GLASS) DEFECT





Shock on Module Top Side \rightarrow Top COF Crack \rightarrow Vertical Line Defect

Shock on Module Left Side \rightarrow Left COF Crack \rightarrow Horizontal Line Defect



ASSEMBLING AND PREPARING

Unpacking

Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and accessories.



- Do not use any pirated items to ensure the safety and product life span.
- · Any damages or injuries by using pirated items are not covered by the warranty.

NOTE -

- The accessories supplied with your product may vary depending on the model.
- Product specifications or contents in this manual may be changed without prior notice due to upgrade of product functions.

Ring Core

How to Use a Ring Core

A ring core reduces electromagnetic waves emitted from the IR receiver. Loop the cable through the core once, before using it as illustrated.

Dimensions (Width x Height x Depth) / Weight



1047 mm x 592 mm x 91.1 mm / 29 kg

To view the User's guide

"Insert CD ROM" in Computer

CD-ROM will open automatically.(for Window only) My computer → Digital_LG(CD-ROM) → Index.htm Open My computer → Digital_LG(CD-ROM) → Manual folder → User's Guide Open

Installing the Product





Cut Packing Strap of the Box.

Cut Tape on the Box.



Open the Box and remove the top packing.



Remove the Upper Box.





Undress the Poly Bag.

Open the Poly Bag.



Lift up the Set using the SIDE/BACK Handle.



Remove Bottom packing when lifting up the Set.



With one hand under the set and the other hand grabbing the set, move the set.





Lay the back of the Set down on the table.





Use the cushion or Pad when you lay the face of the Set downward.



Connect IR receiver to use remocon. And then, connect power code.

Remove L-brackets before Installation

Remove the L-brackets from each corner of the monitor before installing it.



Keep the removed L-brackets and use them when moving the monitor later.

- When you connect Monitor sets for multivision, you may find that the screen color is not the same across all the Monitor sets. If you want to adjust the screen color manually, please refer to the Installation Manual.
- When you install multiple Monitor sets onto a wall, attach the IR Receiver to all the sets, or use an RS-232C cable to connect them and then attach the IR Receiver to the first set.

Tiling Displays

How to Join Sets - Installing Set 1

*Example of 2 x 2 tiling

- The numbers assigned in this example (#1, #2, #3, #4) are used to demonstrate the installation procedure to ensure it is easy to follow. These numbers have nothing to do with the Set ID that is used to operate the remote control.
- Set the guide bracket into the bracket groove using screws and mount the set to the wall mount plate or the wall.



<Rear view of the set with the wall mount plate>



• The wall mount plate is shaded in gray in the illustration to help you see it.

How to Join Sets - Installing Set 2

- Join Set 2 to Set 1 using the guide brackets on the top side of Set 1 and mount the two sets to the wall mount plate or the wall.
- Remove the guide brackets after mounting the sets.





<The sets after removing the guide brackets>



How to remove the guide brackets

- Unscrew the guide bracket screws from the rear of the set and remove the guide brackets.
- Once the screws are removed, the guide brackets will drop. You need to remove them through the gap on the sides of the set.
- This can be done only when there is enough space between the set and the wall mount plate or the wall to unscrew the screws.
 (Please check whether there is enough space to remove the screws before fixing the guide brackets.)





<Removing the guide bracket through the side gap>



How to Join Sets - Installing Set 3

Fix the guide brackets to Set 3 following the steps above, and loosely mount the set to the wall mount plate or the wall.



Minimize the space between the sides of the sets using the U-shaped fixture.

When the sets are joined with the minimum amount of space between them, firmly mount them to the wall mount plate or the wall.

When the sets are firmly mounted to the wall, remove the U-shaped fixtures.



14 ASSEMBLING AND PREPARING

How to Join Sets - Installing Set 4

Loosely mount Set 4 to the wall mount plate or the wall and minimize the space between the sets using the U-shaped fixtures.

When Set 4 is firmly mounted to the wall, remove the U-shaped fixtures. Remove the guide brackets. See <How to Join Sets - Installing Set2,3>. Now the 2 x 2 tiling is complete. You can tile in various combinations, such as 3×3 .







- The guide brackets for tiling should only be used to join sets and should be removed once they are joined.
- The guide brackets should only be used as the assisting tool when tiling sets. The load applied to each set should be supported by the wall mount plate or the wall using a VESA wall mount (800 x 400).
- (Each set must be firmly mounted to the wall mount plate or the wall.)
- The guide brackets must be removed once the sets are joined. When joining the sets without removing the guide brackets, extra caution is required to prevent damage due to the set weight.
- The U-shaped fixtures must also be removed after mounting the set to the wall mount plate or the wall.
- You may mount the set without using the guide brackets or the U-shaped fixtures; this does not affect the
 performance of the device.

, 1919 5

REMOTE CONTROL

CAUTION

The descriptions in this manual are based on the buttons of the remote control. Please read this manual carefully and use the Monitor set correctly.

To replace batteries, open the battery cover, replace batteries (1.5 V AAA) matching \oplus and \bigcirc ends to the label inside the compartment, and close the battery cover. To remove the batteries, perform the installation actions in reverse.

 Do not mix old and new batteries, as this may damage the remote control.

 Make sure to point the remote control at the remote control sensor on the Monitor.



ENGLISH

Power On / Off **Energy Saving** Switches the set on from Adjust the Energy Saving standby or off to standby. mode of the SET. INPUT POWER Monitor On / Off If you press the button once, the Turn off the monitor and then ወ following Input Signal Window turn it back on. will appear. Select the signal ENERGY INPUT type you want using the button. (OFF (eØ) (⊕) ON Number and Alphabet DEE Type numbers. The alphabet selection is not 1/a/A applicable. This button selection is not 8 Clear applicable. POR WXY7 This button selection is not applicable. 1/a/A () CI FAR **PSM** MAR ARC ARC Selects the Picture Status Selects the Aspect Ratio Mode. Mode. BRIGHT NESS Â PSM Δ Volume Up/Down BRIGHTNESS ŀ Adjusts the volume. MUTE 🛒 Moves to the previous or next screen. MENU AI MUTE Switches the sound on or off.



MAKING CONNECTIONS

Connect various external devices to the ports on the Monitor set's back panel.

- 1 Find an external device you want to connect to your Monitor set shown on the following illustration.
- 2 Check the connection type of the external device.
- 3 Go to the appropriate illustration and check the connection details.





 Connect the signal input cable and tighten it by turning the screws clockwise.



when connecting an HDMI cable as illustrated, remove the screw on the HDMI connector first.

< 47WV30MS/47WV30BR >







< 47WV30BS/47WV30-BAAM/47WV30-BAAL >

ENGLISH



Connecting to a USB



Connecting the Power code



Connecting to the LAN

LAN connection

A Using a router(Switching Hub)



B Using the Internet.





Daisy Chain Monitors

RGB Cable



DVI Cable



- "Input signal may be degraded or lost when multiple monitors are connected. For DVI, in general, up to 12 monitors can be connected via the DVI Out port (at the recommended resolution) if the signal is stable and there is no cable loss. (If you want to connect more than this number of monitors, we recommended that you use a distributor.)
- When the tile mode is configured via DVI cables, only the monitor that receives first signals can play HDCP-encrypted content. (The DVI Out port does not support HDCP).
- If the signal cable between the product and your PC is too long, make sure to use the DVI (RGB) booster or DVI (RGB) optical cable.
- If input signals are received through the HDMI/DP cable, multiple monitors cannot be connected via the DVI Out port"

MULTIVISION CONFIGURATION

 Function Setting

 1 IR Receiver connection.



3 Set ID setup for each set.



- 4 IR Receiver removal for all sets except for Set 1.
- 5 RGB connection.

2 Connecting the Power code







6 Connect the Monitor sets, in series, using an RS-232C cable.

7 Installation Menu setup.



8 Tile Mode setup.



Setting the Installation Menu

1 If you press the MENU button on the remote control for more than five seconds, the main menu appears and then disappears. The input data is also displayed in the upper left corner of the screen.



2 Press the "0" button four times. Press the OK button.



LG Digital Signage Setup (V2.21)					
▲					
 Menu Display 	Yes				
 OSD Display 	Yes				
Min Volume	0				
Max Volume	100				
Power On Operation	No				
 Input Source 	OFF				
 Volume 	OFF				
Aspect Ratio	OFF				
 Intelligent Auto 	Yes				
•					
	● OK				

LG Digital Signage Setup (V2.21)						
Factory Reset	No					
	● OK					

3 When the Installation Menu is displayed, select the item you want.



Signage Mode Operation	Decide to work all functions of 'Signage Mode Operation' or not.			
15Min Force Off	Turns off the monitor if there is no input for more than 15 minutes. "No" is the recommended default value setting.			
4 hours off	Turns off the monitor if there is no input on the remote control for more than four hours. "No" is the recommended default value setting.			
Wake On LAN	Turns on the monitor remotely using LAN.			
Total Set ID	Sets the maximum value for picture IDs.			
DPM	Enters energy saving mode if there is no input signal.			
Software Update	Sets whether to use NSU (Network Software Update).			
Power On Status	Decide to select working status of Monitor Set when turn on main power.			
Input Source Change	Decide to change input source or not by setting 'Input Source Change' as Yes(Change possible) or No(Change impossible).			
Menu Display	MENU key does not work if 'Menu Display' is set to No.			
OSD Display	Decide to display OSD or not by setting 'OSD Display' as Yes(Mark) or No(No Mark).			
Min Volume	Decide 'Min Volume' between changing range 0 to 100.			
Max Volume	Decide 'Max Volume' between changing range 0 to 100.			
Power On Default	With the power turned on, you can set the 'Input Source' and 'Volume' options.			
Input Source	Set whether it is turned on by the set input source or by the last stored input source.			
Volume	This sets whether to apply the Volume Level or not when the power is turned on.			

Aspect Ratio	With the power turned on, you can set the 'Aspect Ratio' option with the pre-defined value.		
Intelligent Auto	If the setting is Yes, Display is automatically arranged through resolution size when you change the resolution at the first.		
Factory Reset	If it is set to No, 'Factory Reset' under OPTION is disabled.		

Setting the Tile Mode

In Tile Mode you can view an image in a larger scale by connecting multiple monitors.

- · Tile Mode Off: An input image is not enlarged, and the same image is shown on all connected monitors.
- · Tile Mode On: An input image is enlarged according to the value in the H. Set Count and V. Set Count fields.



• 2X1: When using two monitors ID 2 D 1 Tile ID

• 2X2:









• 4X4:	

When using 16 monitors



Setting the Picture ID

Picture ID is used to change the settings of a specific set (display) using a single IR receiver for multi-vision. The set receiving the IR signal communicates with another set via the RS232 connector. Each set is identified by a Set ID. If you assign the Picture ID using the remote control, only displays with the same Picture ID and Set ID can be controlled remotely.





2X2 Multi-Vision (Total Set ID: 4) Set IDs are assigned as shown in the picture.

1 Press the ID On (Red) button on the remote control.



2 If you press the left/right buttons or press the ON button repeatedly, the Picture ID cycles through OFF and 1 to 4.Assign the ID you want.



- If you assign the Set ID to each set with multi-vision, and then assign the Picture ID using the red button on the remote control, the key command is displayed for the set with the same Set ID and Picture ID. A set with different Set IDs and Picture IDs cannot be controlled by IR signals.
- Refer to the Set ID on page 46 for assigning a Set ID.
- The maximum value of the Picture ID can be set in the Total Set ID menu.
- Please refer to the Installation Manual for more information on the assignment of a Total Set ID.

- For example, if the Picture ID is assigned to 2, the upper right display (Set ID: 2) can be controlled by IR signals.
- For each set, you can change the settings for the PICTURE, AUDIO, TIME, OPTION, NETWORK and MY MEDIA menus or the hot keys on the remote control.
- If you press the ID OFF (Green) button, the Picture IDs for all sets are turned off. If you then press any button on the remote control, all sets will start working again.
- The Picture ID function may not work during MY MEDIA operating.

